

user selectable features

	1 x 	2 x 	3 x 
1 x 	Add new remote (autolearn)***	Change PIN code	New remote learn arm/disarm only
2 x 	Auto (passive) arm on/off		New remote learn accessory A channel
3 x 	Chirps on/off/quiet		New remote learn accessory B channel
4 x 	Auto lock ignition/off/rpm	Remote valet on/off	New remote learn silent mode
5 x 	Auto unlock ignition/off	Entry delay on/off	New remote learn remote valet
6 x 	Auto (passive) arm and lock on/off	Reset all features to factory (except remotes and PIN code)	New remote learn remote start*
7 x 			New remote learn window down/vent**
8 x 	Second unlock on/off	Autostart setting* (off/battery only/ temp only/ battery and temp)	
9 x 			BlackJax on/off **** Clear all remotes

* This feature is only available with optional IntelliStart connected.

** This feature is only available with optional SmartWindows connected.

*** This feature is only available with the 5-button Radar 2 transmitter.
To program the 4-button remote use New remote learn in column 3.

**** This feature is not evaluated by Thatcham.

user selectable features descriptions - column one

add new remote (only applicable with Radar 2 remote)

- Auto-learn new remote controls to the system in the standard button configuration. For more information, see programming note #1.

auto (passive) arm - on/off

- On: When the system sees the ignition turn off and the last protected entry (door, bonnet, or boot) close, it will begin a 30-second countdown before arming itself. After the first five seconds, you will hear two chirps and the lights will flash. The system will arm 25 seconds later.
- Off: The transmitter must be used to arm the system.

chirps - on/off/quiet

- On: Chirps will sound when arming/disarming the system.