

- Off: Chirps will not sound when arming/disarming the system.
- Quiet: Chirps will sound when arming/disarming the system but at a lower volume than normal.

auto lock - ignition/off/rpm

- Ignition: The doors will automatically lock three seconds after the ignition is turned on unless a door is open at that time.
- Off: The doors will not lock automatically.
- Rpm: The doors will lock when the system sees the engine reach a preprogrammed RPM. The H1/4 VIOLET/BLACK or Intellistart must be connected.

auto unlock - ignition/off

- Ignition: The doors will automatically unlock as soon as the ignition is turned off.
- Off: The doors will not automatically unlock when the ignition is turned off

auto (passive) arm lock - on/off

- On: The doors will lock when the system passively arms. This feature only applies when passive arming is programmed on.
- Off: The doors will not lock when the system passively arms.

second unlock - on/off

- On: Second unlock output is active when the arm/disarm button is pressed within 10 seconds of disarming the system.
- Off: Second unlock output is pulsed at the same time as the unlock output when the system is disarmed.

user selectable features descriptions - column two

change pin code

- This feature allows you to change the user's personal PIN code. For more information, see programming note #5. The factory default PIN code is noted on the back of the Owner's guide.

remote valet on/off

- On: The alarm can be put into valet mode with the remote control.
- Off: The alarm can not be put into valet mode with the remote control.