

entry delay on/off

- On: If the system has passively armed, it will not trigger for 15 seconds after a door is opened allowing the user to enter the vehicle and disarm the system via the PlainView 2 Valet switch.
- Off: There is no entry delay when the system has passively armed. The system will trigger instantly when a door is opened.

reset all features to factory settings

- All system settings (except PIN and remote programming) in the User Programming grid will be reset to their default factory setting as indicated in bold lettering. No installer programmable features will be changed.
- Press the arm/disarm button of the TX; the siren will chirp twice as confirmation.

auto start setting - off/battery only/temp only/battery and temp

- This feature is only available with the IntelliStart* option.
- Off: The vehicle will not autostart.
- Battery: The vehicle will only autostart when the car battery voltage has dropped to a preset level.
- Temperature: The vehicle will only autostart at a preset low temperature.
- Battery and temperature: The vehicle will autostart with a low voltage car battery or low temperature.

NOTE: Temperature and battery calibration and settings can only be made with the Cliffnet Wizard or Wizard Pro programming software.

blackjax* on/off

- On: The system will enter BlackJax mode when triggered.
- Off: The system cannot enter BlackJax mode.

user selectable features descriptions - column three

The features in this column pertain to programming individual transmitter channels in custom configurations. Following is an explanation of the features. Program the individual transmitter channels following the instructions in programming note #2.

arm/disarm only

- The remote control channel programmed into this feature will arm/disarm the system only.

* This feature/accessory is not evaluated by Thatcham.