

installer selectable features

To enter the Installer Selectable Features grid follow the instructions for the User Selectable Features with the exception of step 4. Perform step 4 as described below to enter the Installer Selectable Features grid.

Hold/Chirp/Release - After entering the PIN code, press and hold  until the siren chirps once. Continue holding for approximately 10 seconds until the siren chirps three times, then release the button. You have now entered the feature selection position of the Installer Selectable Features grid.

	1 x 	2 x 	3 x 
1 x 	Lock pulse single/double	Acc. output A P1*/ P2**/timer A/latch/ latch (ignition reset)	Program RPM
2 x 	Unlock pulse single/double	Acc. output B P1*/ P2**/timer B/latch/ latch (ignition reset)	Engine type petrol/diesel***
3 x 	Lock pulse duration 0.8/3.5 sec		Program SmartWindows 4****
4 x 	Delayed interior light on/off	Timer A duration for acc output A	Horn output pulsed/latched
5 x 	Acc. output B auto-activate off/arm/disarm/both	Timer B duration for acc output B	

- * P1 = Pulsed channel output is disabled with the ignition on or the alarm is armed.
- ** P2 = Pulsed channel output works anytime.
- *** Only with optional IntelliStart connected.
- **** Only with optional SmartWindows connected.

installer selectable features descriptions - column one

lock pulse single/double

- Single: One door lock pulse will be output when the system arms.
- Double: Two door lock pulses will be output when the system arms.

unlock pulse single/double

- Single: One door unlock pulse will be output when the system disarms.
- Double: Two door unlock pulses will be output when the system disarms.