

- **Timed:** The length of output duration set.
- **Latched:** The output can be turned on at any time with the remote control and will remain in that state until the button is pressed again.
- **Latched (ignition reset):** The output can be turned on at any time with the remote control and will remain in that state until the button is pressed again or the ignition is turned on.

accessory output a timer duration

- **Start Timer:** Press the  button; the siren will chirp to signal the start of the timer duration setting.
- **Stop Timer:** Press the  button; the siren will chirp to signal the end of the timer duration setting, or for maximum time, do not press the  button.

*NOTE: The timer max setting is 255 seconds.*

accessory output b timer duration

- **Start Timer:** Press the  button; the siren will chirp to signal the start of the timer duration setting.
- **Stop Timer:** Press the  button; the siren will chirp to signal the end of the timer duration setting, or for maximum time, do not press the  button.

*NOTE: The timer max setting is 255 seconds.*

## **installer selectable features descriptions - column three**

rpm programming

- Programs the tachometer input for the BlackJax\* and door locks. For more information, see programming note #4.

engine type petrol/diesel

- This feature applies only if IntelliStart 4 is installed.
- **Petrol:** The IntelliStart will crank the engine three seconds after the ignition is turned on or after input on the wait-to-start wires ceases.
- **Diesel:** The IntelliStart will crank the engine 20 seconds after it turns the ignition on and will ignore the wait-to-start input wires.

*NOTE: RPM must be reprogrammed after changing this feature.*

\* This feature is not evaluated by Thatcham.