

smart windows program

- This feature applies only if SmartWindows is installed.
- Enter this feature and then follow the programming instructions included with SmartWindows.

horn output - pulsed/latched

- Pulsed: H2/9 YELLOW/WHITE wire will generate a pulsing (-) output when the alarm is sounding. When arming and disarming the output does not operate.
- Latched: H2/9 YELLOW/WHITE wire will generate a constant (-) output when the alarm is sounding. When arming and disarming the output will pulse as per the standard chirp pulses.

programming notes

Note #1: Adding a new transmitter in auto-learn configuration

- Press the  button of the Radar 2 remote control; the siren will chirp once.
- Immediately press  again; the siren will chirp twice to confirm the new transmitter has been programmed.

Note #2: Adding a new transmitter in custom-configuration

- For the  channel, transmit the channel of the new three, four, or five button transmitter that you want to control that feature; the siren will then chirp once.
- Immediately transmit the same channel again, the siren will chirp twice to confirm the transmitter channel has been programmed.
- For the rest of the channels only one press of the button is required to learn, and the siren will chirp the same number of times as the feature row.

NOTE: When programming a new transmitter to custom configuration, an arm/dis-arm channel must first be programmed before programming the remaining channels.