

Use one of the following methods to turn off auto-immobilization

- Turn ignition on and press the  button of the transmitter.
- Arm the alarm and then disarm the alarm.
- Turn the ignition on and enter the system valet/PIN code.

one-time valet feature

This feature allows the system to be put in valet mode only until the next time the ignition is turned off. (This feature is a Thatcham and EC requirement and, therefore is not programmable.)

blackjax* feature

blackjax activation sequence

When BlackJax is programmed ON, BlackJax sequence will begin every time the ignition is turned on and must be turned off by entering the PIN code. It will then activate again while driving when triggered as described below.

NOTE: Blackjax can be turned off by entering PIN code at any time.

1. Ignition on.
 - System sees input on Zone 7 ignition input.
2. Door Open & Close.
 - System sees input on H1/17 or H1/18 Door trigger input.
3. Press and release brake pedal.
 - a. System sees (+) input on H2/16 BROWN/WHITE brake input/output wire.
 - b. System then begins monitoring input on H1/2 VIOLET/BLACK wire or Intellistart 4.
 - c. System sees RPM at or above 2 x programmed rate, BlackJax begins 20 second countdown.
4. After a 20 second countdown:
 - a. 5 siren chirps as reminder to enter PIN code.
 - b. Brake light relay pulses (+) 12v on H2/16 BROWN/WHITE to flash brake lights.
 - c. You then have 20 more seconds to enter PIN to turn off Blackjax.

* This feature is not evaluated by Thatcham.