

5. If PIN code is NOT entered within 20 seconds:
 - System sounds siren and begins flashing indicator lights.
 - Brake lights continue to flash.
 - The system will now immobilise as described in steps 6-7.
6. If system sees the RPM rate return to 1 ½ times programmed RPM rate or lower, the system will immobilise the vehicle as described in step 7
7. Vehicle Immobilisation:
 - immobiliser will engage the starter and ignition circuits.
 - The siren will continue to sound and the indicator and brake lights will flash for a maximum of 5 minutes.
 - Immobilisation circuits will remain active until correct PIN code is entered.

blackjax* deactivation sequence

To deactivate BlackJax* turn the key on and then enter the PIN code at any time.

bypass blackjax* temporarily (if on in program grid)

Bypass BlackJax* temporarily

1. Turn ignition on.
2. Enter PIN code. Do not enter valet or programming mode.
3. Within 10 seconds: Press  button of remote control.
4. Siren chirps 1 time as confirmation of BlackJax* bypassed.
5. Turn Ignition Off, siren chirps 3 times as confirmation of exiting programming.

NOTE: If ignition remains on after entering PIN code and no action for 10 seconds, unit will automatically exit programming mode without chirps.

To return to normal BlackJax* Operation

1. Turn ignition on.
2. Enter Pin code.
3. Within 10 seconds: Press  button of remote control.
4. Siren chirps 2 times as confirmation of BlackJax* active.
5. Turn ignition off, siren chirps 3 times as confirmation of exiting programming.

NOTE: If ignition remains on after entering PIN code and no action for 10 seconds, unit will automatically exit programming mode without chirps.

* This feature is not evaluated by Thatcham.