

blackjax* off warning indicator

Each time the ignition is turned off when BlackJax is bypassed the LED will flash 10 times as a visual reminder.

certificate of installation

After installation you must fill out the certificate of installation. Once you have filled out all information on the certificate the customer must sign and date it. Distribute the copies as follows:

- White (top) copy - customer
- Blue copy - customer's insurance broker
- Pink copy - Directed Electronics, UK office
- Green copy - installing dealer

troubleshooting

Closing the door triggers the system, but opening the door does not.

- Have you correctly identified the type of door switch system? This happens often when the wrong door input has been used.

The system will not passively arm until it is remotely armed and then disarmed.

- Are the door inputs connected? Is a BLUE wire connected to the door trigger wire in the vehicle? The GREEN H1/18 or the VIOLET H1/17 should be used instead.

The PlainView 2 Valet switch does not work.

- Make sure that it is plugged in. (See the Plug-In Harness section of this guide.)
- Is the switch plugged into the correct socket?
- Check the System Features Learn Routine for the default PIN code.
- Has the PIN code been changed?

The status LED does not work.

- Make sure that it is plugged in. (See the *Plug-In Harnesses* section of this guide.) Is the LED plugged into the correct socket?

* This feature is not evaluated by Thatcham.