




■ ENGINE CONTROL SYSTEM ■ FUEL CONTROL SYSTEM ■ IGNITION SYSTEM

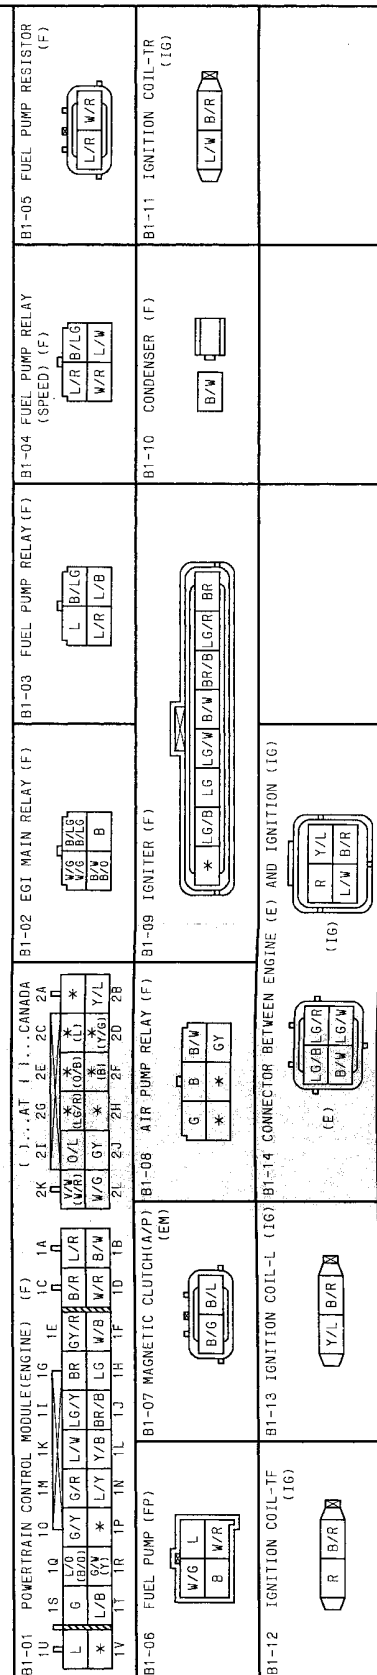

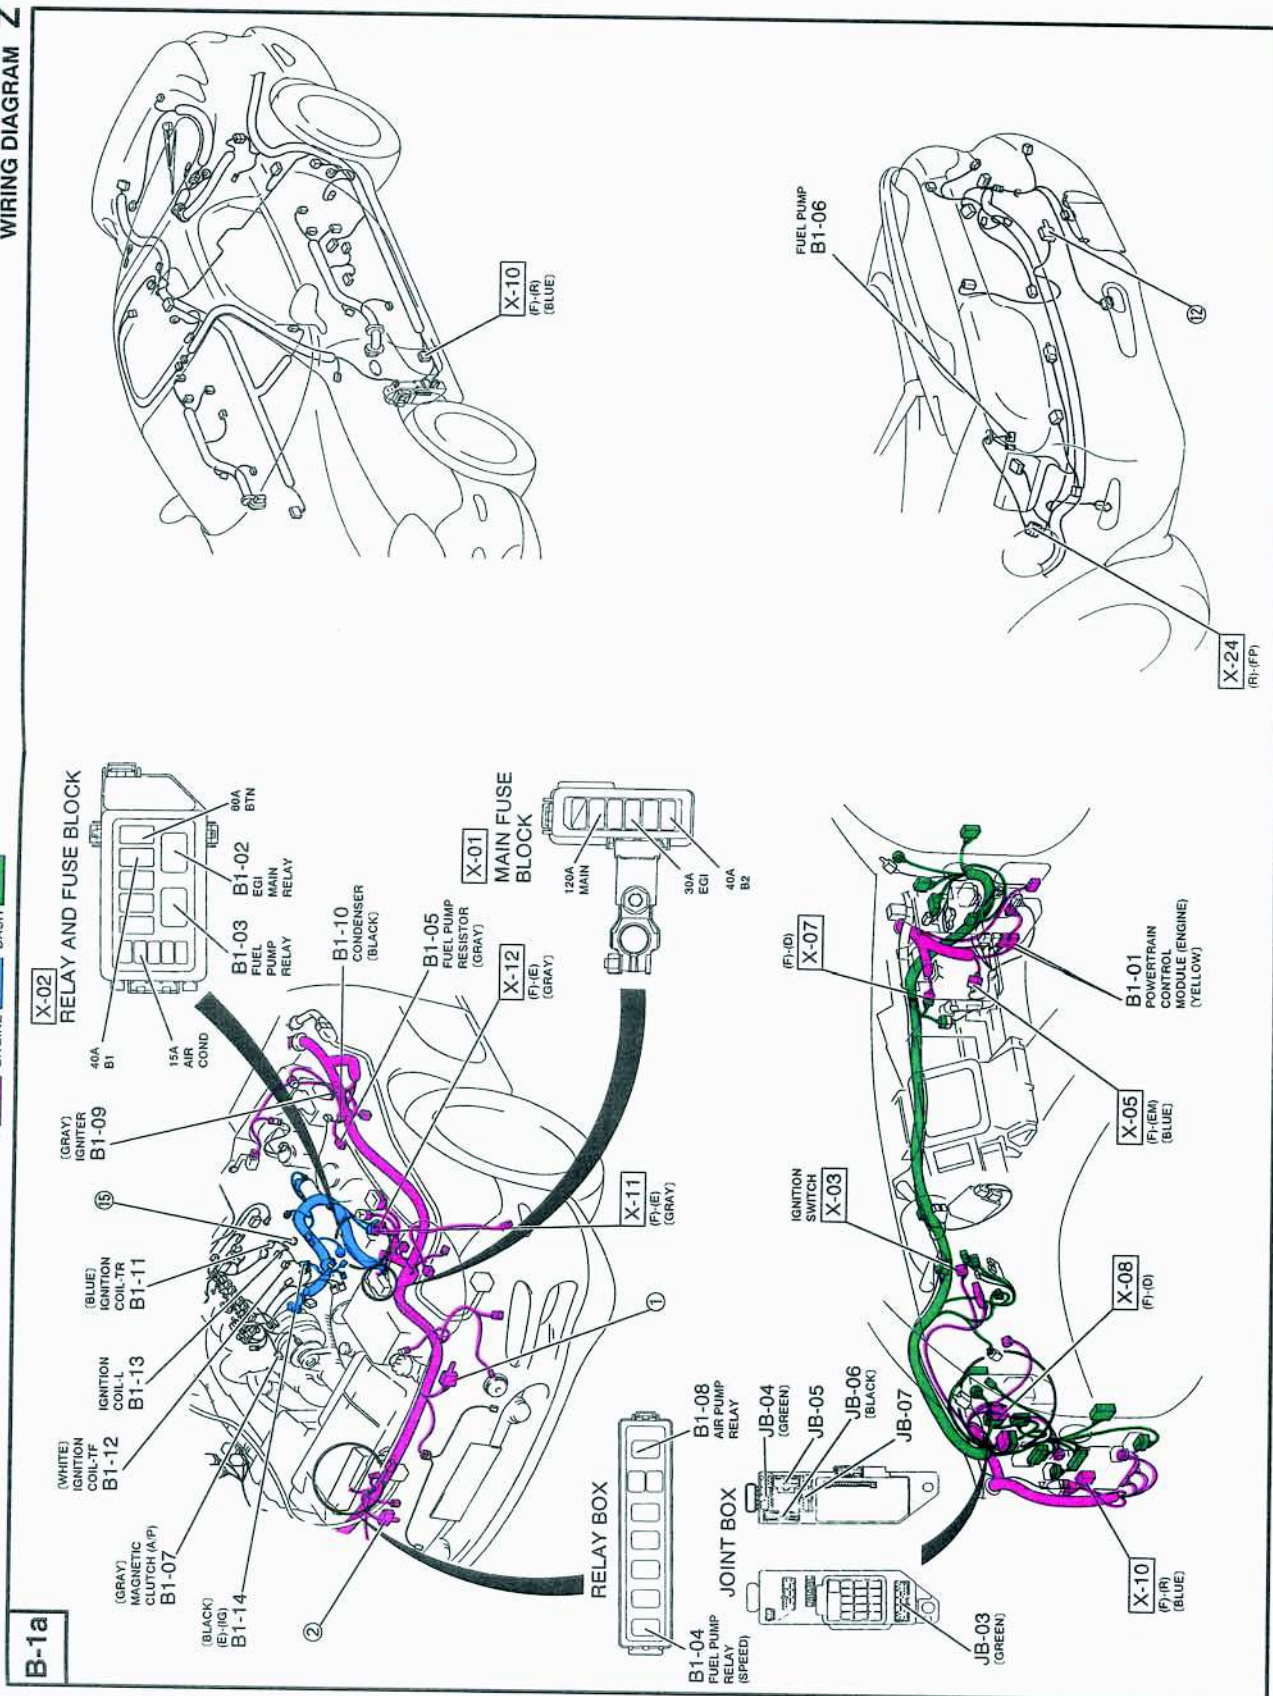





B-1b ■ ENGINE CONTROL SYSTEM ■ FUEL CONTROL SYSTEM

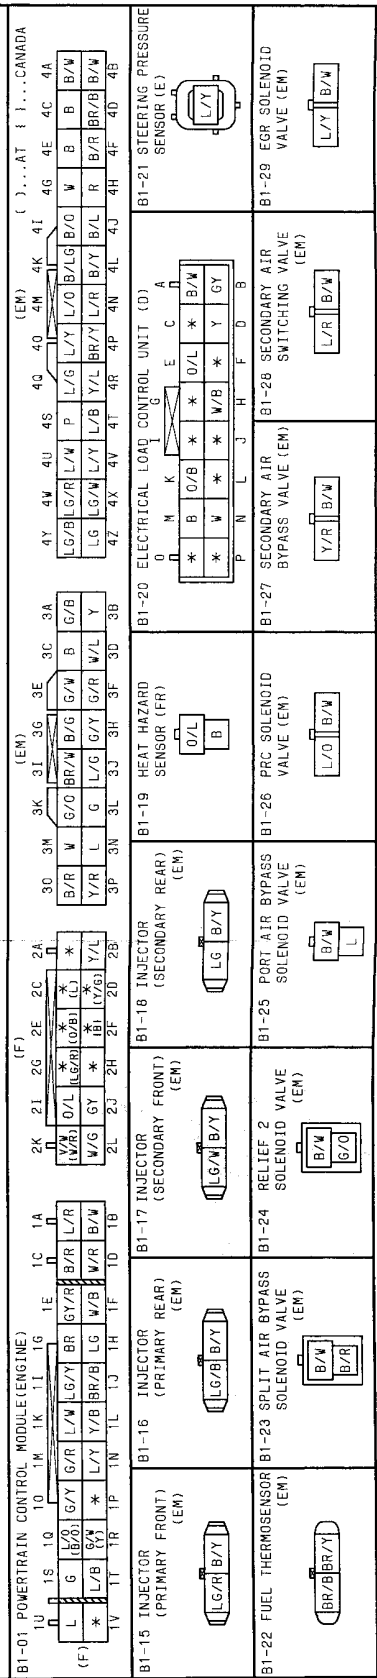

WIRING DIAGRAM Z


HARNES COLOR : FRONT ENGINE DASH

B-1b

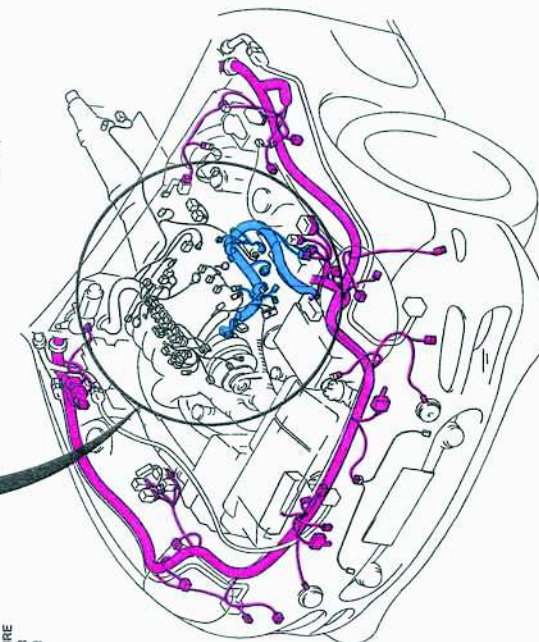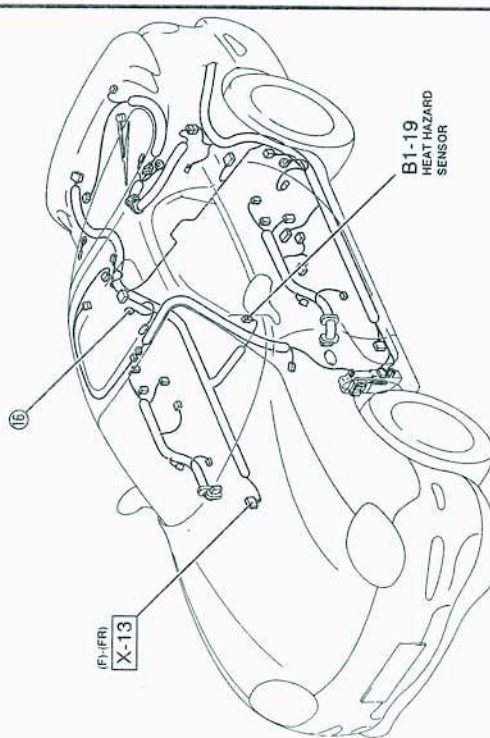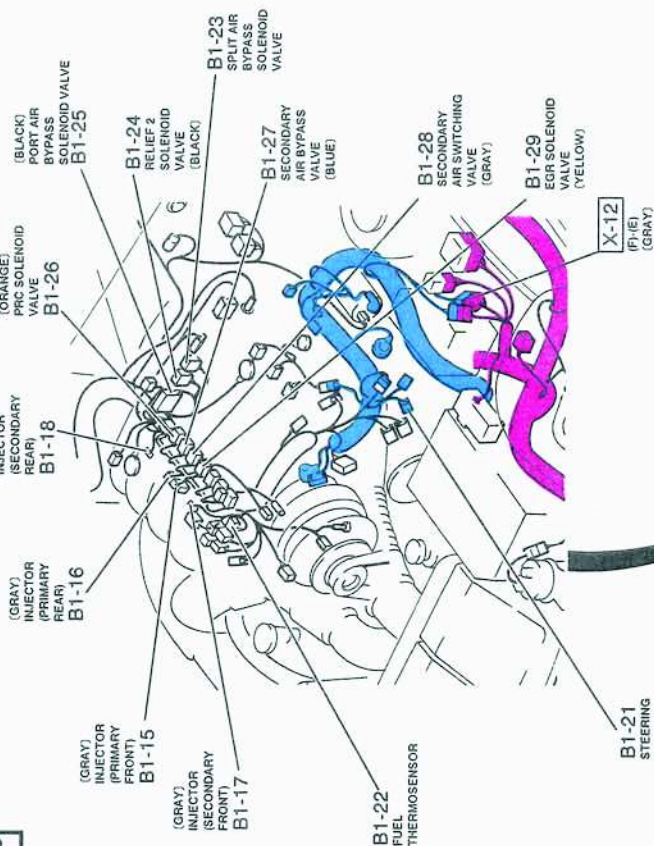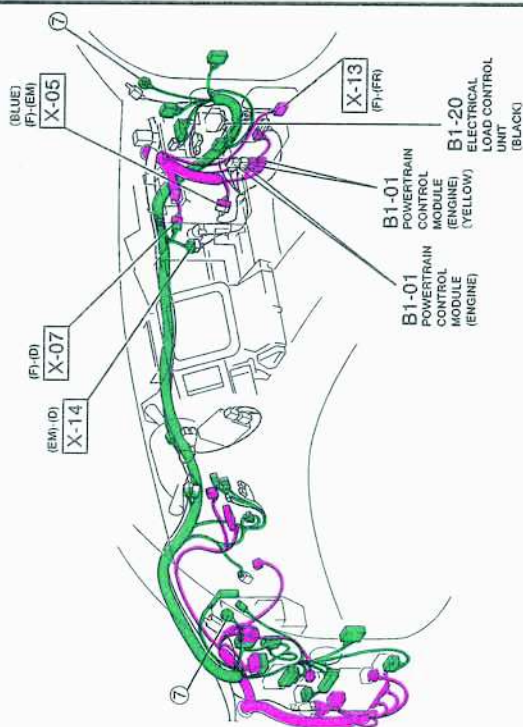

Z WIRING DIAGRAM



B-1c ■ ENGINE CONTROL SYSTEM

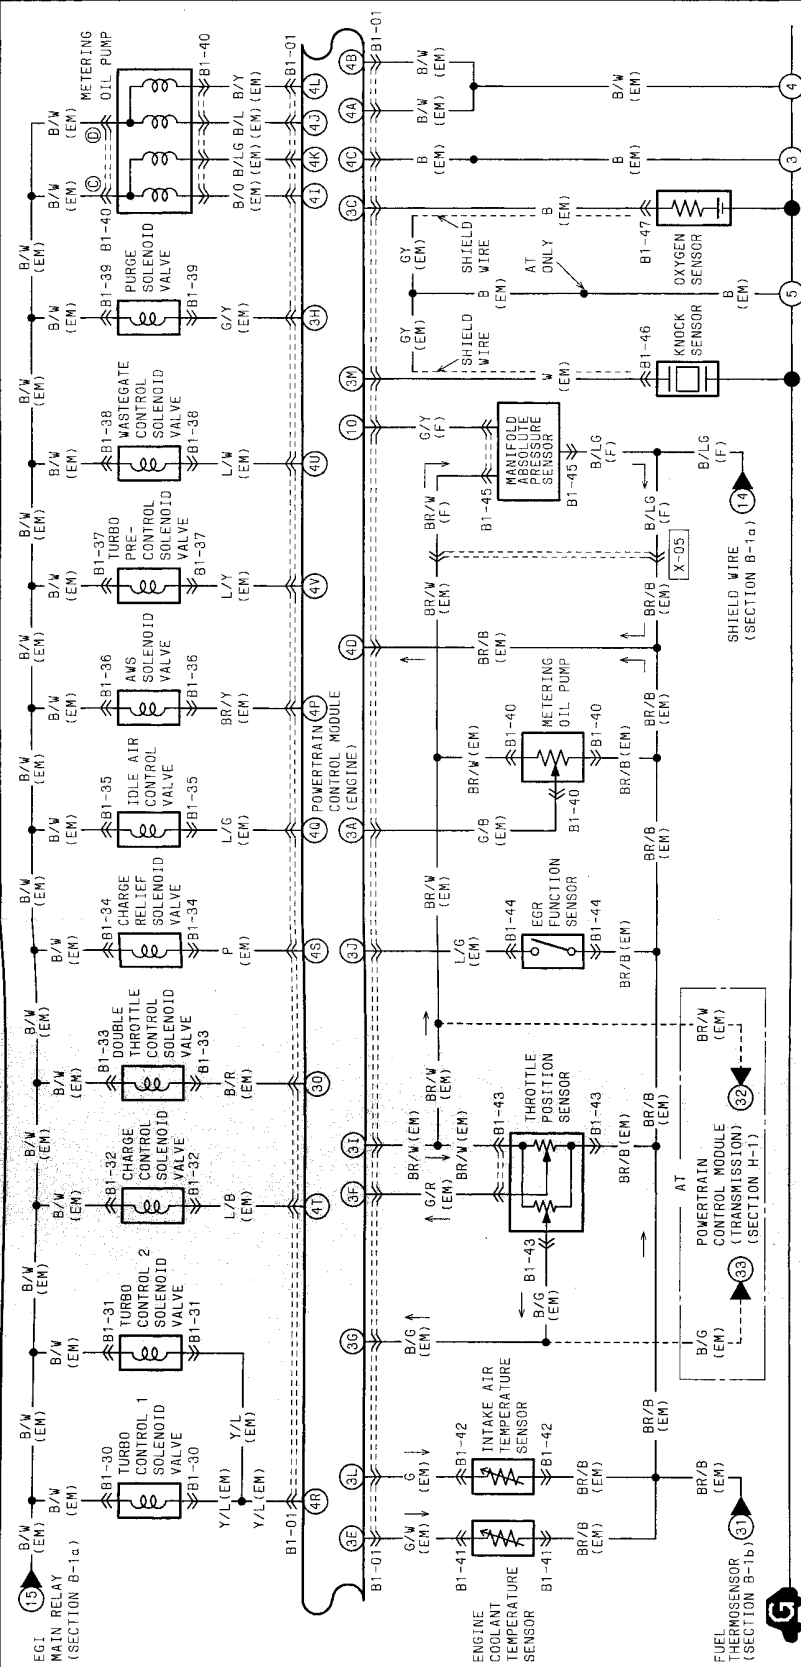

B1-01 POWERTRAIN CONTROL MODULE (ENGINE)									
1U	1S	1Q	1M	1K	1I	1G	1E	1C	1A
L	G	G/Y	G/R	L/G/Y	BR	G/Y/R	B/R	L/R	B/R
* L/B	G/Y	* L/Y	Y/B	BR/B	LG	W/B	V/R	B/W	
1V	1T	1R	1P	1N	1L	1J	1H	1F	1D
B1-32 CHARGE CONTROL SOLENOID VALVE (EM)									
B1-33 DOUBLE THROTTLE CONTROL SOLENOID VALVE (EM)									
B1-34 CHARGE RELIEF SOLENOID VALVE (EM)									
B1-35 IDLE AIR CONTROL VALVE (EM)									
B1-36 AMS SOLENOID VALVE (EM)									
B1-37 TURBO PRECONTROL SOLENOID VALVE (EM)									
B1-38 WASTEGATE CONTROL SOLENOID VALVE (EM)									
B1-39 PURGE SOLENOID VALVE (EM)									
B1-40 METERING OIL PUMP (EM)									
B1-41 ENGINE COOLANT TEMPERATURE SENSOR (EM)									
B1-42 INTAKE AIR TEMPERATURE SENSOR (EM)									
B1-43 THROTTLE POSITION SENSOR (EM)									
B1-44 EGR FUNCTION SENSOR (EM)									
B1-45 MANIFOLD ABSOLUTE PRESSURE SENSOR (F)									
B1-46 KNOCK SENSOR (EM)									
B1-47 OXYGEN SENSOR (EM)									

HARNESS COLOR : FRONT ENGINE DASH

B-1c

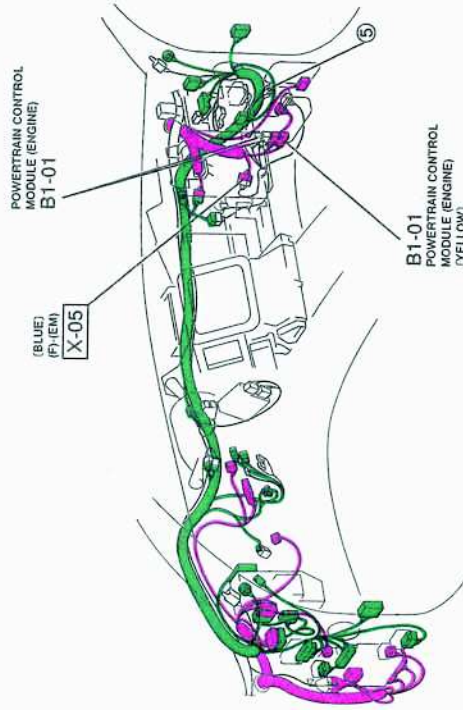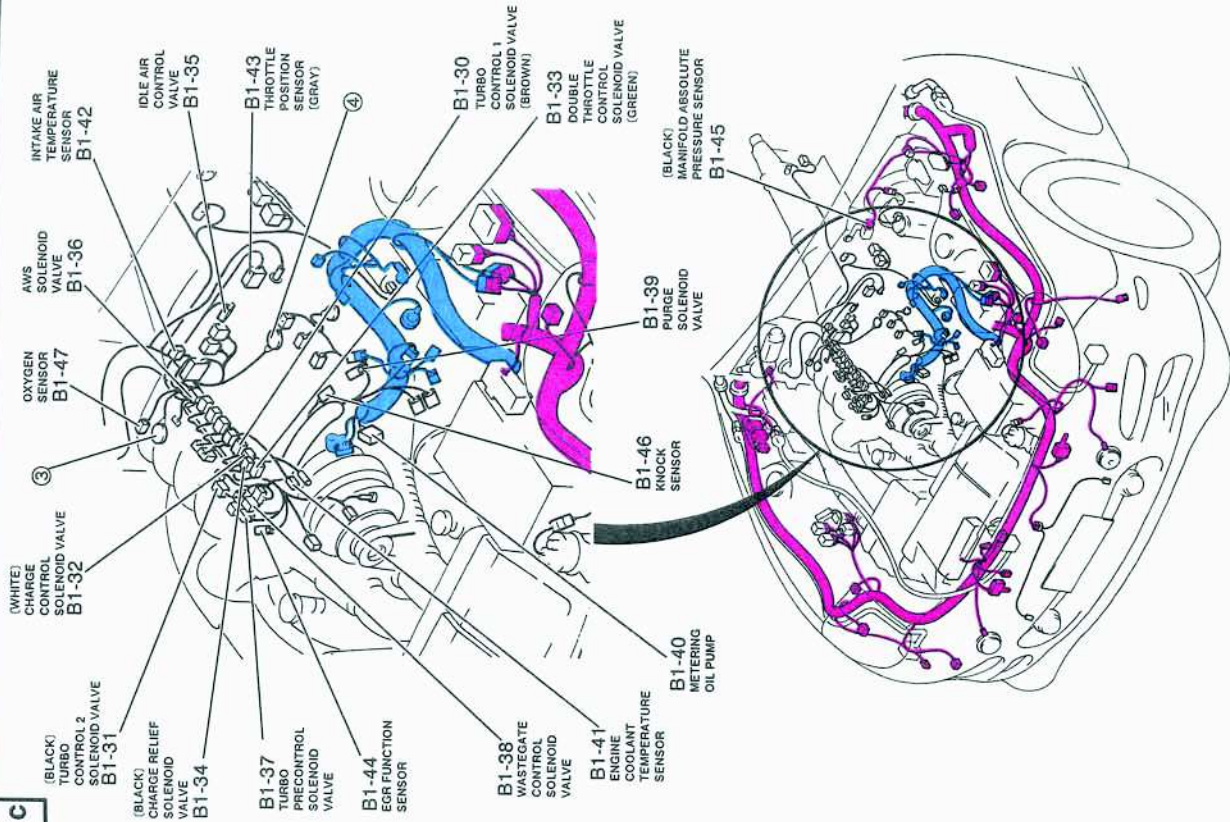

B-1d ■ ENGINE CONTROL SYSTEM



HARNESS COLOR: FRONT ENGINE DASH

B-1d

